


## MF-1FR-W Quick Spec

MECHANICALLY FASTENED MEMBRANE - 1 LAYER FR-10 - WOOD DECK (NEW OR TEAR OFF)

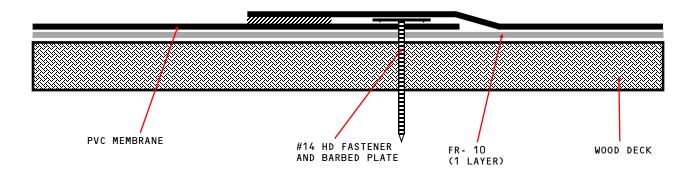

## NOTES:

- 1. Spot attach FR-10 with #14 Fastener and Plate to prevent fluttering under the membrane.
- 2. Plastic simplex nails are not allowed to fasten FR-10.
- 3. There maybe slope restrictions regarding Fire Ratings. Please contact the Phoenix Technical Department for Fire Rating restrictions if required.